

## COMBINATION SWITCH

Remove bolts and remove combination switch. Refer to [SRS-40, "Removal and Installation"](#).

## CONSOLE FINISHER (A/T RING) (A/T)

1. Move selector lever to the drive position.
2. Insert a flat-bladed screwdriver wrapped with tape from behind console finisher (A/T ring) and remove by lifting.

