


BODY REPAIR

Body Component Parts (Coupe) UNDERBODY COMPONENT PARTS

AIS0044G

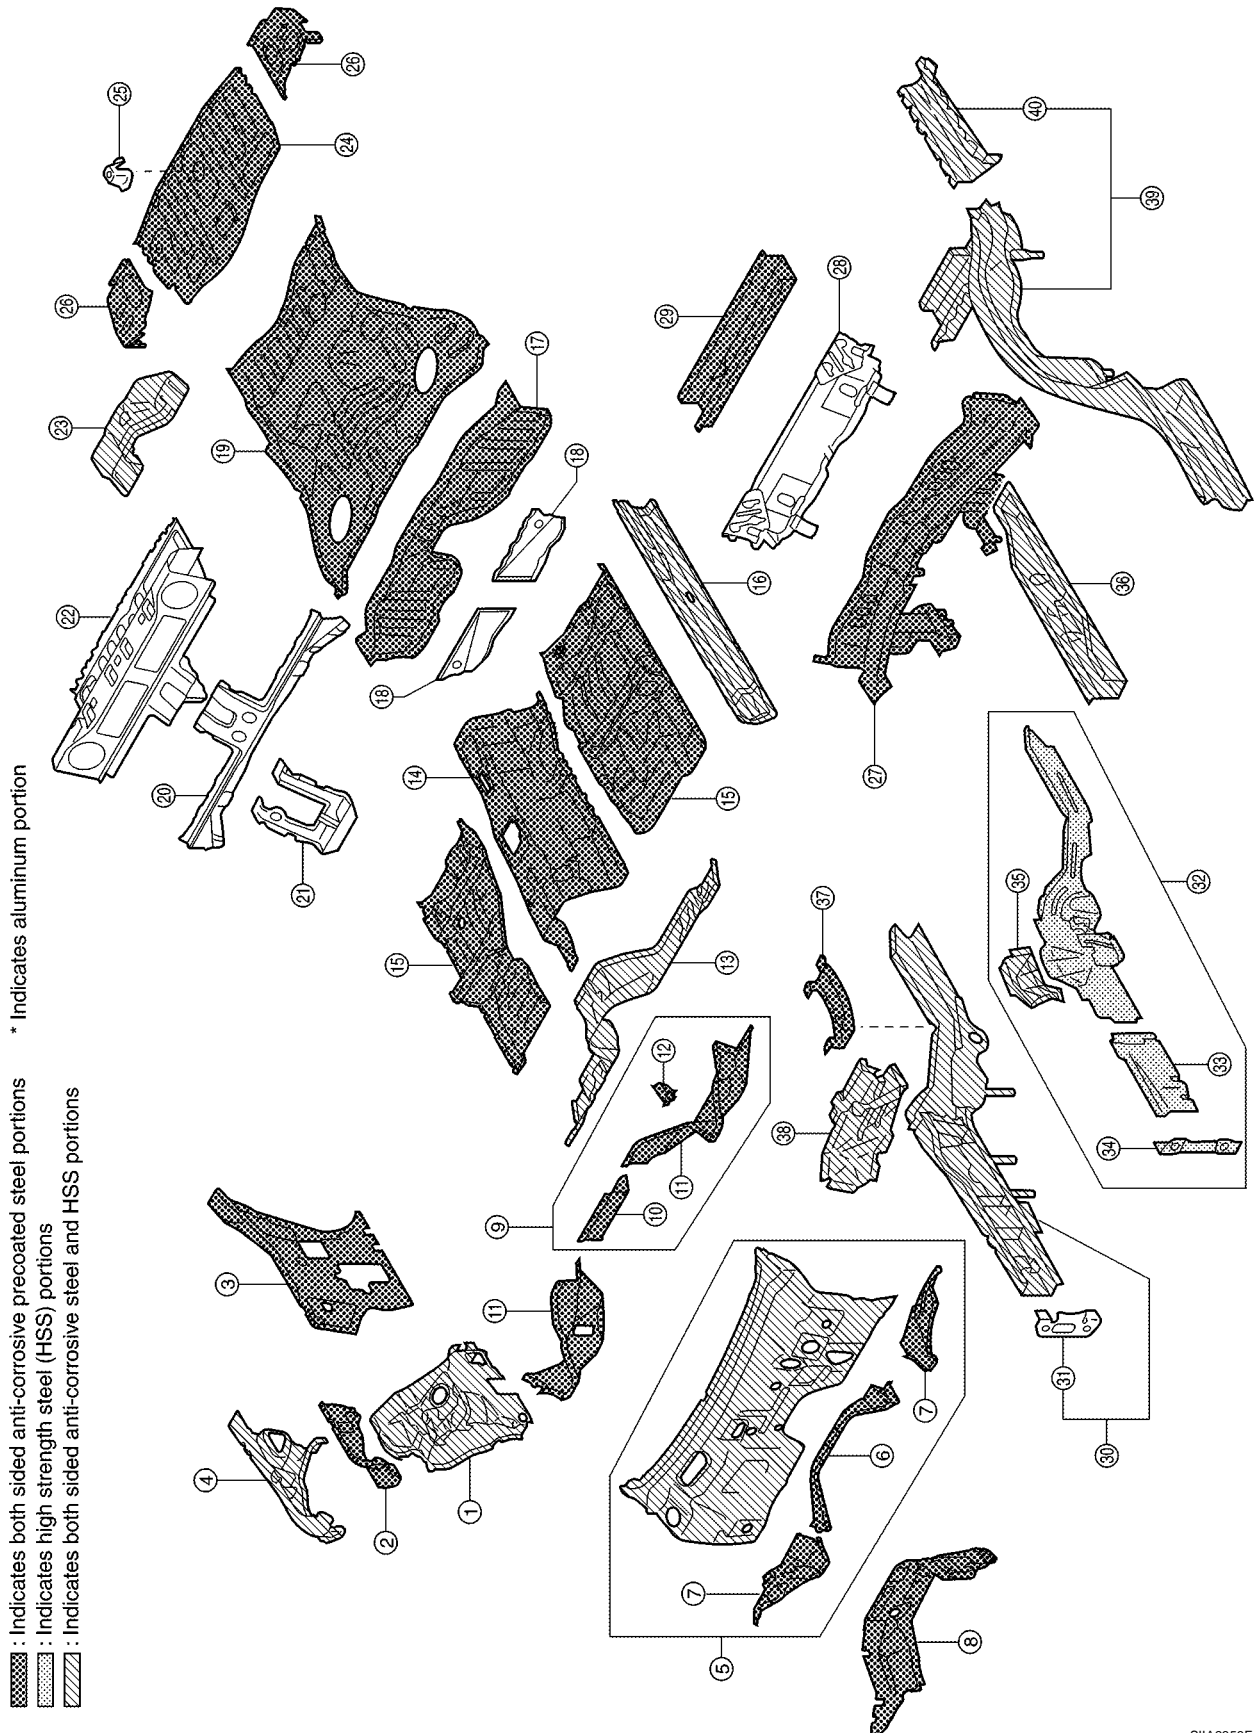

SIIA2356E

BODY REPAIR

| | | |
|-----|--|----|
| 1. | Front strut housing (RH&LH) | A |
| 2. | Upper front hoodledge (RH&LH) | |
| 3. | Upper rear hoodledge (RH&LH) | |
| 4. | Hoodledge reinforcement (RH&LH) | B |
| 5. | Upper dash assembly | |
| 6. | Lower dash crossmember center reinforcement | |
| 7. | Lower dash crossmember reinforcement | C |
| 8. | Cowl top | |
| 9. | Lower dash crossmember assembly | |
| 10. | Front crossmember center | D |
| 11. | Lower dash crossmember | |
| 12. | Steering column mounting reinforcement | |
| 13. | Lower dash | E |
| 14. | Front floor center | |
| 15. | Front floor | |
| 16. | Inner sill (RH&LH) | F |
| 17. | Rear seat crossmember reinforcement assembly | |
| 18. | Rear floor gusset | |
| 19. | Rear floor front | G |
| 20. | Rear step upper panel assembly | |
| 21. | Rear step lower panel assembly | |
| 22. | Inside step panel | H |
| 23. | Rear floor seat belt anchor reinforcement | |
| 24. | Rear floor rear | |
| 25. | Spare tire clamp bracket | BL |
| 26. | Rear floor side | |
| 27. | Rear seat crossmember | |
| 28. | 2ND rear crossmember | J |
| 29. | Rear center crossmember assembly | |
| 30. | Front side member assembly (RH&LH) | |
| 31. | Inner front towing hook bracket (RH&LH) | K |
| 32. | Front side member closing plate assembly (RH&LH) | |
| 33. | Front side member front closing plate (RH&LH) | |
| 34. | Outer front towing hook bracket (RH&LH) | L |
| 35. | Front side member center closing plate (RH&LH) | |
| 36. | Front side member rear extension (RH&LH) | |
| 37. | Front side member rear reinforcement (RH&LH) | M |
| 38. | Front side member outrigger assembly (RH&LH) | |
| 39. | Rear side member assembly (RH&LH) | |
| 40. | Rear side member extension (RH&LH) | |