


### SECONDARY REAR HATCH RELEASE

The secondary rear hatch release mechanism allows opening the rear hatch in the event of discharged battery or emergency.

The release (string) handle is located under the strut tower bar inside the luggage compartment.

**To open the rear hatch from the inside, firmly pull the release handle to the direction shown above until the lock releases.**

### FUEL FILLER LID

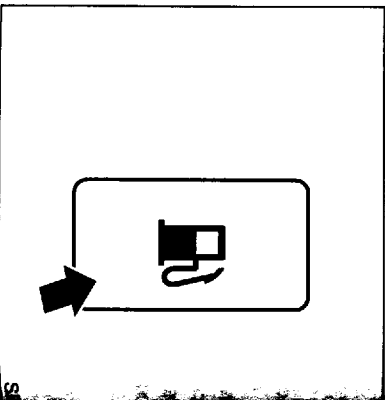

### OPENER OPERATION

To open the fuel filler lid, push the opener. To lock, close the fuel filler lid securely.