


Step 23: You will need to fold it in place and then remove the 3M tape and screw it into place. Do the same thing for the other side and work you're your way to the middle.

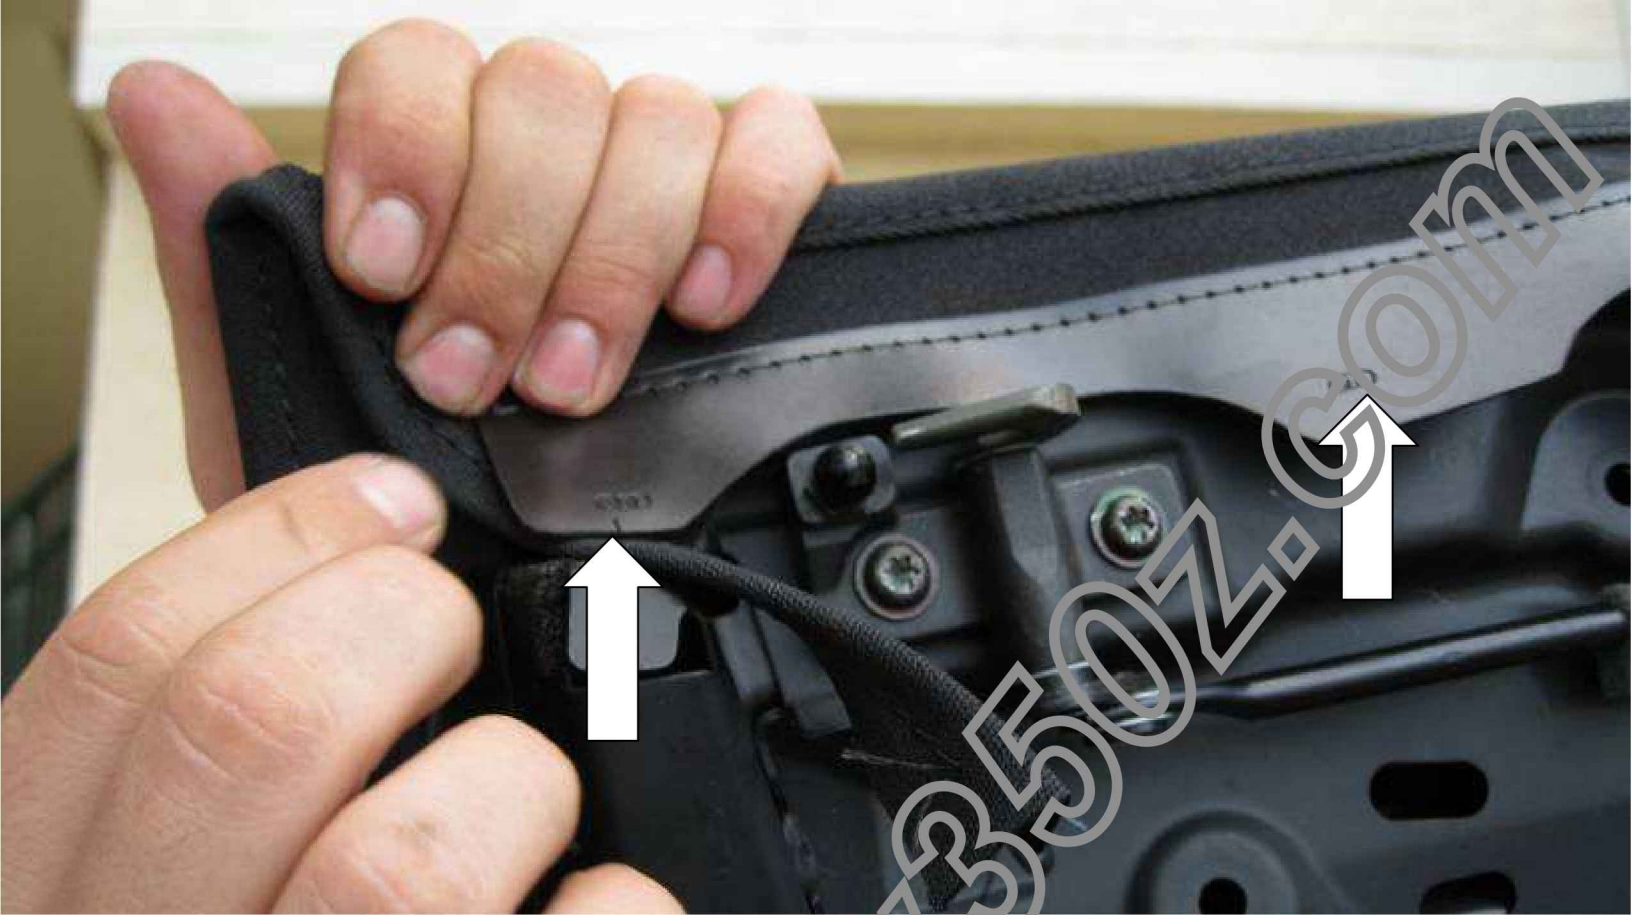







NOTE: DO NOT REMOVE THE LONG 3M TAPE UNTIL A WEEK LATER SO THE TOP WILL GET STRETCHED. YOU CAN GET TO THE LONG RED 3M TAPE LATER BY REACHING YOUR HAND IN FROM THE INSIDE OF THE CAR.

